This is the Internet version of the quick guide. © Print only for private use.

M600i
Quick Guide

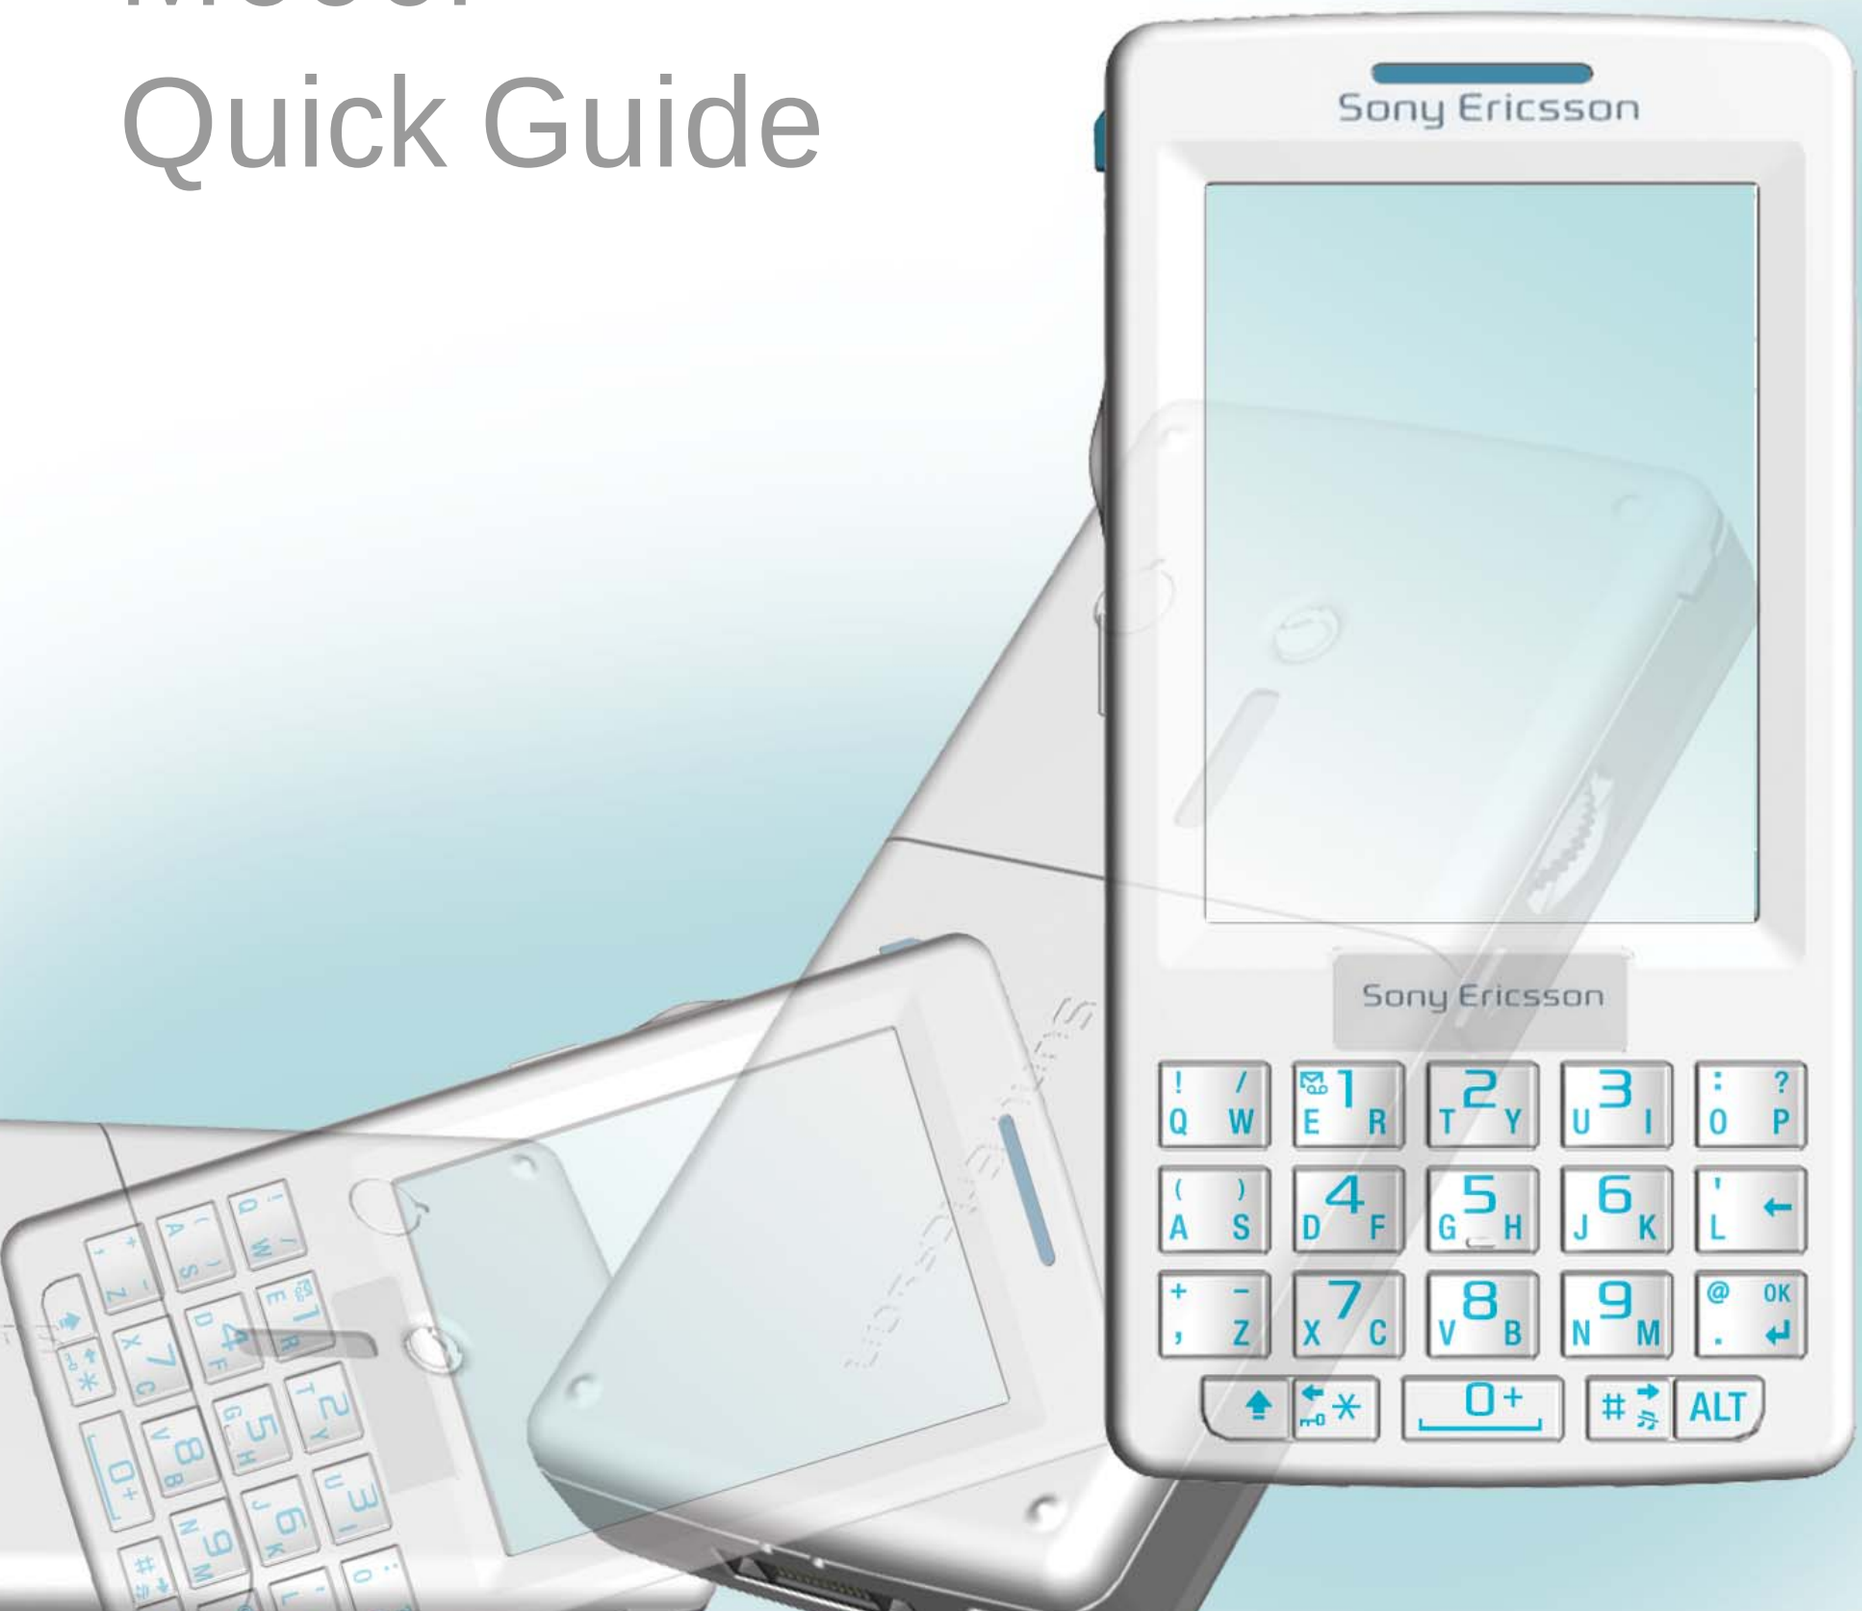

This is the Internet version of the quick guide. © Print only for private use.

SIM card and battery

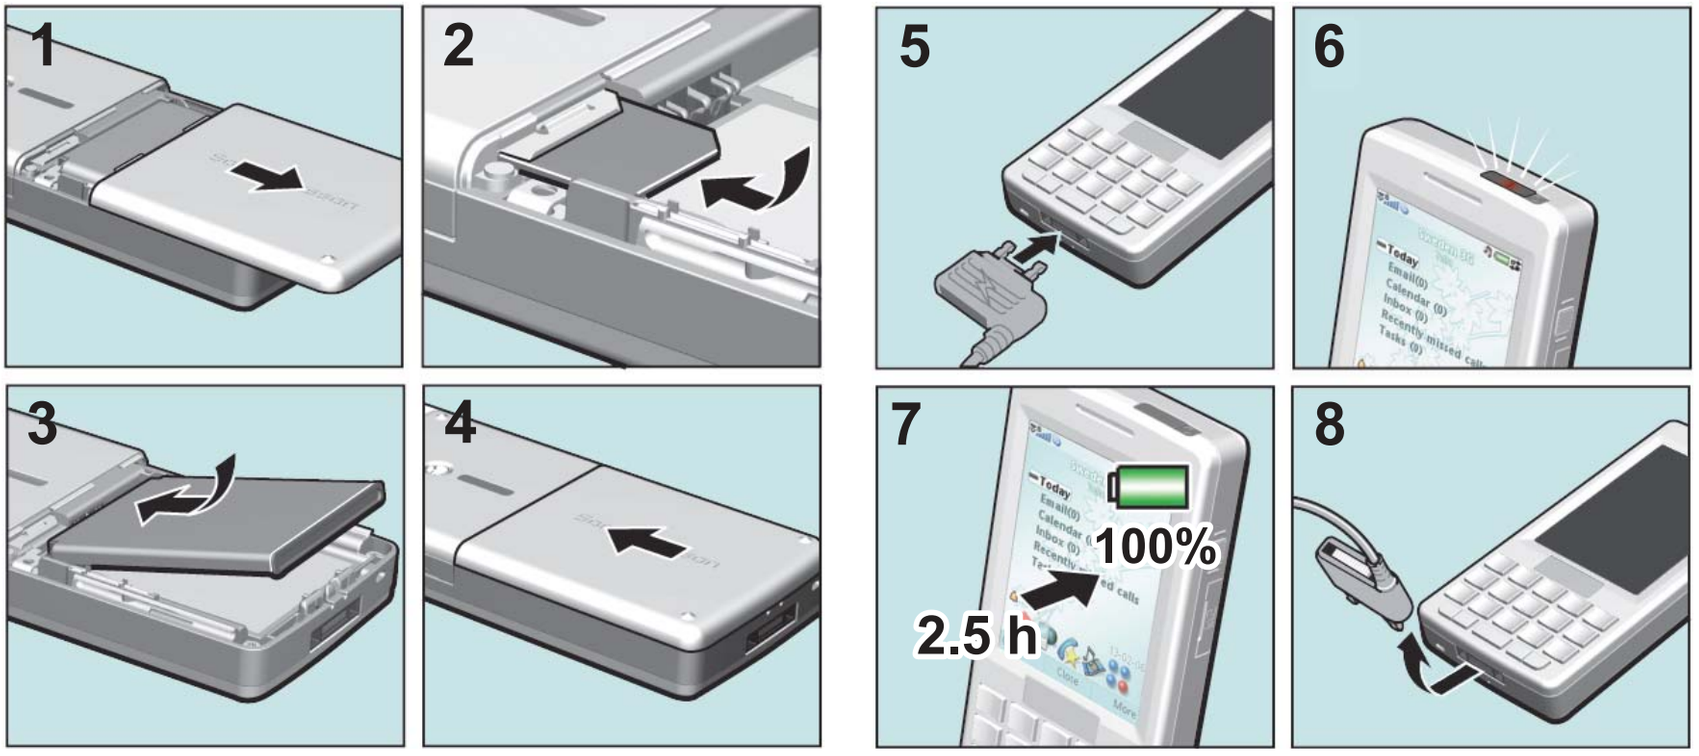

1. Remove the battery cover.
2. Insert the SIM card *under* the SIM ejector, with the contacts facing down.
3. Insert the battery with the label side up and the connectors facing each other.
4. Slide the battery cover back into place.
5. Connect the charger, with the symbol on the charger plug facing upwards.
6. During charging the infrared port indicator is on.
7. Wait about 2.5 hours for the battery to be fully charged.
8. Remove the charger from the phone by tilting the plug upwards.

This is the Internet version of the quick guide. © Print only for private use.

Getting started

To turn on the phone

1. Press and hold the On/Off button until you hear the welcome sound.
2. Select ***Phone on,*** or ***Flight mode*** where the use of mobile phones is prohibited.
3. Enter the PIN code provided with the SIM card if the ***Enter PIN*** dialog appears.

The first time you use your phone, a setup wizard will help you to enter the basic settings.

To make a call

Using the keyboard, enter the phone number and press ***OK***, or select ***Call*** on the screen. You can also make a call from Contacts .

Navigation

To navigate menus and select items, use the Jog Dial and the Back button or tap the screen with your fingertips or the stylus.

Jog Dial

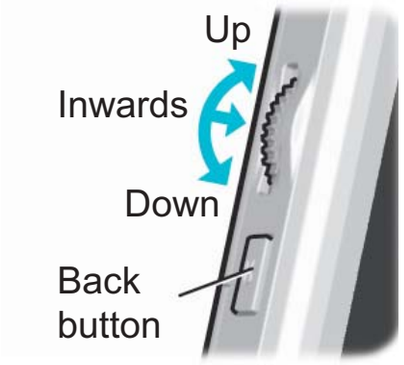

Rotate the Jog Dial to scroll lists up and down, adjust sound volume or move through a multimedia message. Press the Jog Dial inwards to select a highlighted item.

Back button

The Back button is located on the left side of the phone, next to the Jog Dial. You can use this button when you, for example, want to back from one menu to another. A long press on the Back button locks the keyboard.

Stylus

Use the stylus to operate the touch-sensitive screen.

Keyboard

Your phone has a full alphanumerical keyboard, with dual functionality keys. Most of the keys have two characters

This is the Internet version of the quick guide. © Print only for private use.

located on the lower part of the key – press the left or right side of the key to type these characters. In text fields you get access to the characters or symbols at the top of the key, for example the numbers 1-9, by pressing the ALT key first.

Activity menu

The Activity menu is displayed whenever you switch on your phone. It is the starting point for performing a variety of tasks and for accessing applications via the Main menu.

Activity menu overview

A. Today's information. Check your unread email, missed calls, tasks and upcoming appointments.

B. Shortcuts bar.

C. Touch options bar, including the More menu and various commands.

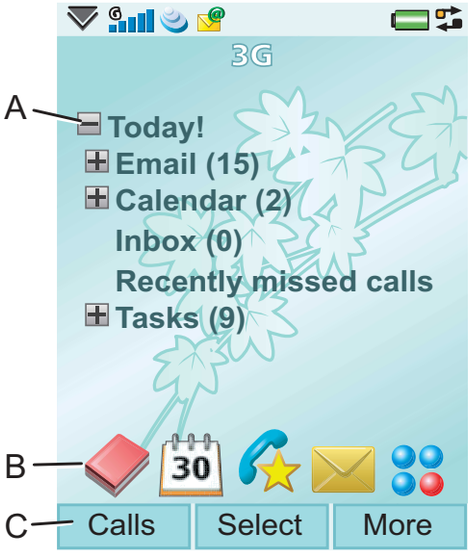

The Activity menu offers you an overview of the day's events and tasks (A). You can personalize this overview and select, for example, which headings to show. To explore the options available, select ***Preferences*** in the ***More*** menu.

The Activity menu also includes shortcuts to common applications (B). You can change these predefined shortcuts to quickly reach your most frequently used applications and links. Using the Jog Dial, navigate to the shortcut you want to change and select ***Replace*** in the ***More*** menu.

Multitasking

Your phone allows you to multitask. For example, while making a phone call you can browse the Internet for the latest financial news. You can have several applications open at the same time, and you can simply switch between them using Task manager. Leaving an application via Task manager, rather than closing it, lets you return to the same view when you later switch back to the application.

To open Task manager, tap in the upper right-hand corner of the screen. Below the divider, the last five used applications are listed. If you want to start a new application from here, select ***Main menu***.

This is the Internet version of the quick guide. © Print only for private use.

Email and push email

Your phone is designed to be a true mobile email device. Create, send and receive email messages and invite people to meetings in the same convenient way as if you were using your computer at your office or at home.

With a push email application in your phone, email messages received in your ordinary mailbox are automatically forwarded to your phone. Some push email applications also keep your Calendar fully updated, without any need for additional synchronization. Constant access to your company's global address book is another push email benefit. Please consult your email service provider for further details.

Downloading settings

Settings for Internet/WAP browsing, email and MMS may be downloaded from your network operator, or from Sony Ericsson. In the first place, contact your network operator.

To download settings from Sony Ericsson
On your computer, browse to *www.sonyericsson.com/support* and follow the instructions on the screen.

Synchronizing

Using Bluetooth™ wireless technology, an infrared connection or the supplied USB cable you can synchronize your phone contacts, appointments, tasks and notes with the corresponding information in your computer. The necessary software can be found on the PC Suite CD delivered with your phone.

For more information on synchronization, please see the User Guide, or the Web Guide at *www.sonyericsson.com/support*.

Memory Stick Micro

A Memory Stick Micro™ (M2™) provides extra storage space, suitable for pictures, music, applications and documents.

Your phone comes with a Memory Stick in place. If you want to remove it, open the cover and press the edge of the Memory Stick inwards. To re-insert the Memory Stick, press it into the slot, contacts facing down, until it snaps into place.

This is the Internet version of the quick guide. © Print only for private use.

Added dimensions – Accessories from Sony Ericsson

Bluetooth™ Headset HBH-GV435

Clear sound with lasting comfort

Desk Stand CDS-60

Your phone's best assistant: connect a USB cable, charger and portable handsfree

Advanced Car Handsfree HCA-60

Excellent stereo sound for voice and music in the car

This is the Internet version of the quick guide. © Print only for private use.

Congratulations on your purchase of the Sony Ericsson M600. Enjoy effective email and touchscreen high speed Internet on the go. In addition to pre-installed multimedia content, you have more waiting for you at *www.sonyericsson.com/fun*. Check also out Sony Ericsson Application shop at *www.sonyericsson.com/applicationshop* to get the maximal usage of your M600.

And if you register at *www.sonyericsson.com/register,* you get an exclusive offer.
Don’t miss out. Go there now.

This is the Internet version of the quick guide. © Print only for private use.

Transferring contacts from a SIM card

If you have an old SIM card with valuable contacts information, you can easily transfer this information to your new phone.

To copy from SIM to Contacts

1. Select ***Contacts***.
2. In the ***More*** menu, select ***View folder > SIM*** to open the SIM card.
3. Mark the entries that you want to copy.
4. In the ***More*** menu, select ***Copy to Contacts***.

Try and Buy applications

The Try and Buy applications in your phone represent a wide variety of business and entertainment applications. They have been pre-stored on the supplied Memory Stick, where you also find information on how to buy the applications.

For additional software, visit the Sony Ericsson Application Shop at *www.sonyericsson.com/applicationshop*.

For copyright, trademark and legal information, please see the User Guide.

EN/LZT 162 039 R1A